


# LAKWOOD 15210 SERIES FASTENER REQUIREMENTS

## Ford 390, 406, 427 & 428

For this product to meet SFI specification 6.1 the fasteners listed below must be used.

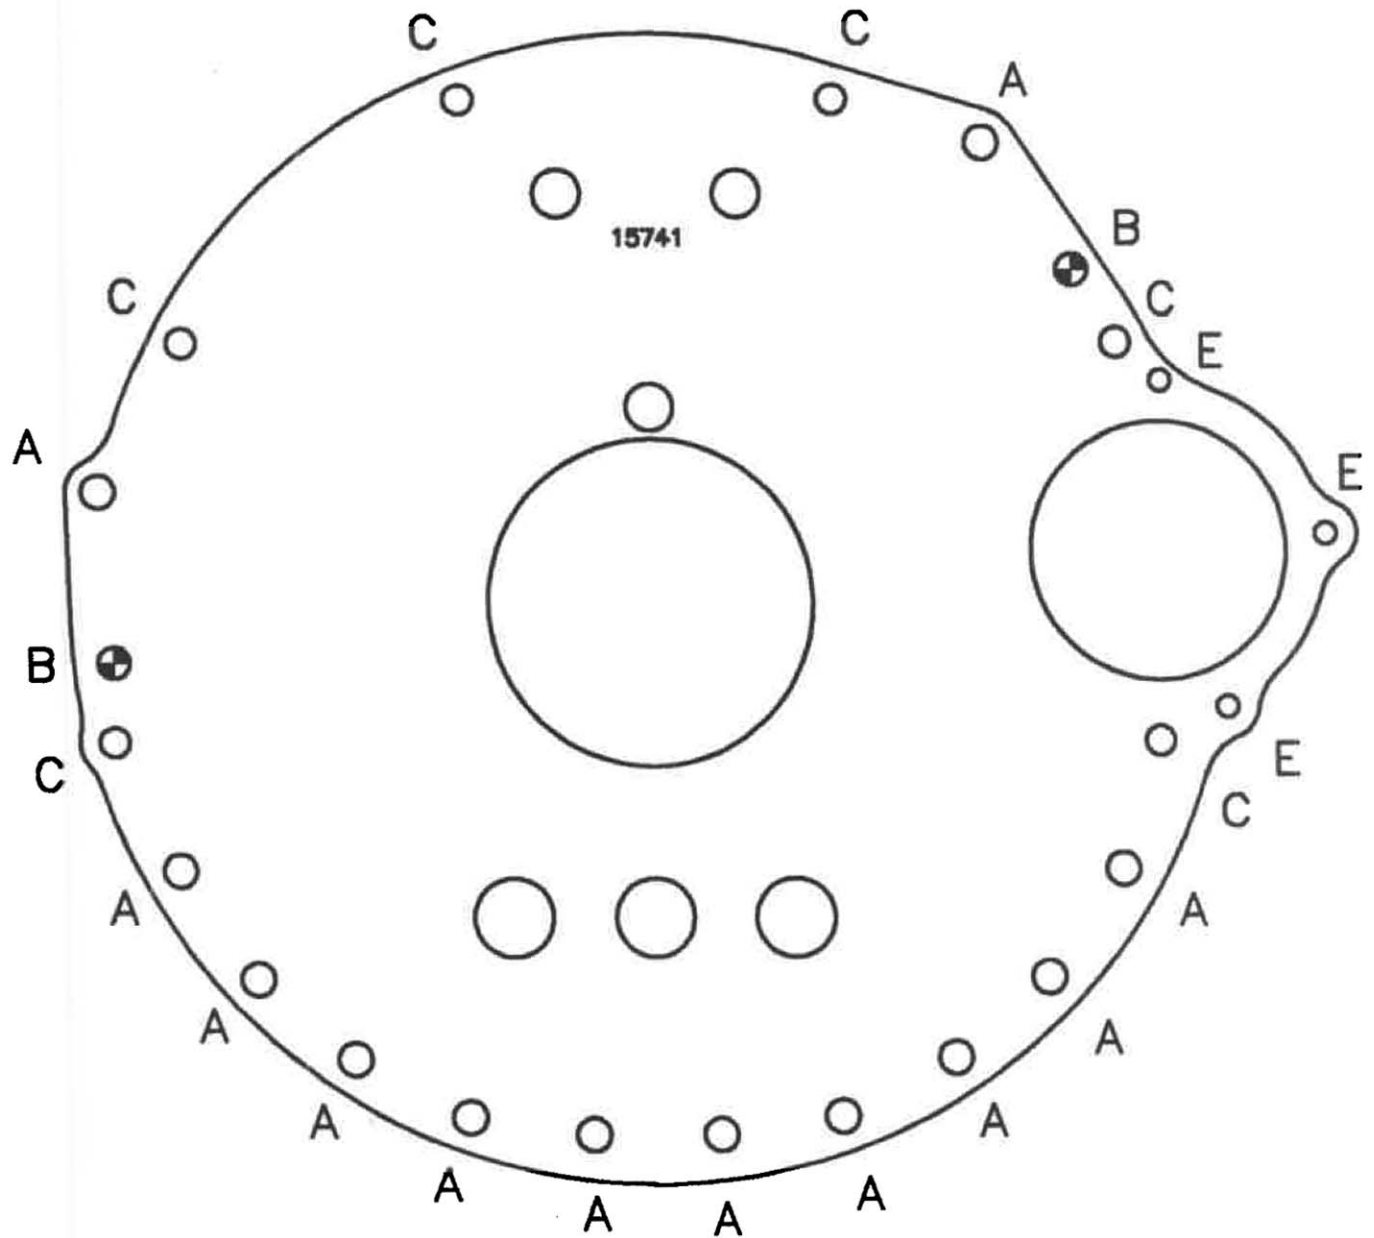

- A = 1/2-13 X 1" GRADE 8 BOLTS, WASHERS & NUTS.
- B = BELLHOUSING LOCATING PINS (NOT INCLUDED)
- C = 7/16-14 X 1" GRADE 8 CAP SCREWS.
- D = 3/8-16 X 1" GRADE 8 BOLTS, WASHERS & NUTS.
- E = GRADE 5 STARTER BOLTS.