


# LAKEWOOD 15320 SERIES FASTENER REQUIREMENTS

Mopar 273, LA 318, 340 & 360

For this product to meet SFI specification 6.1 the fasteners listed below must be used.

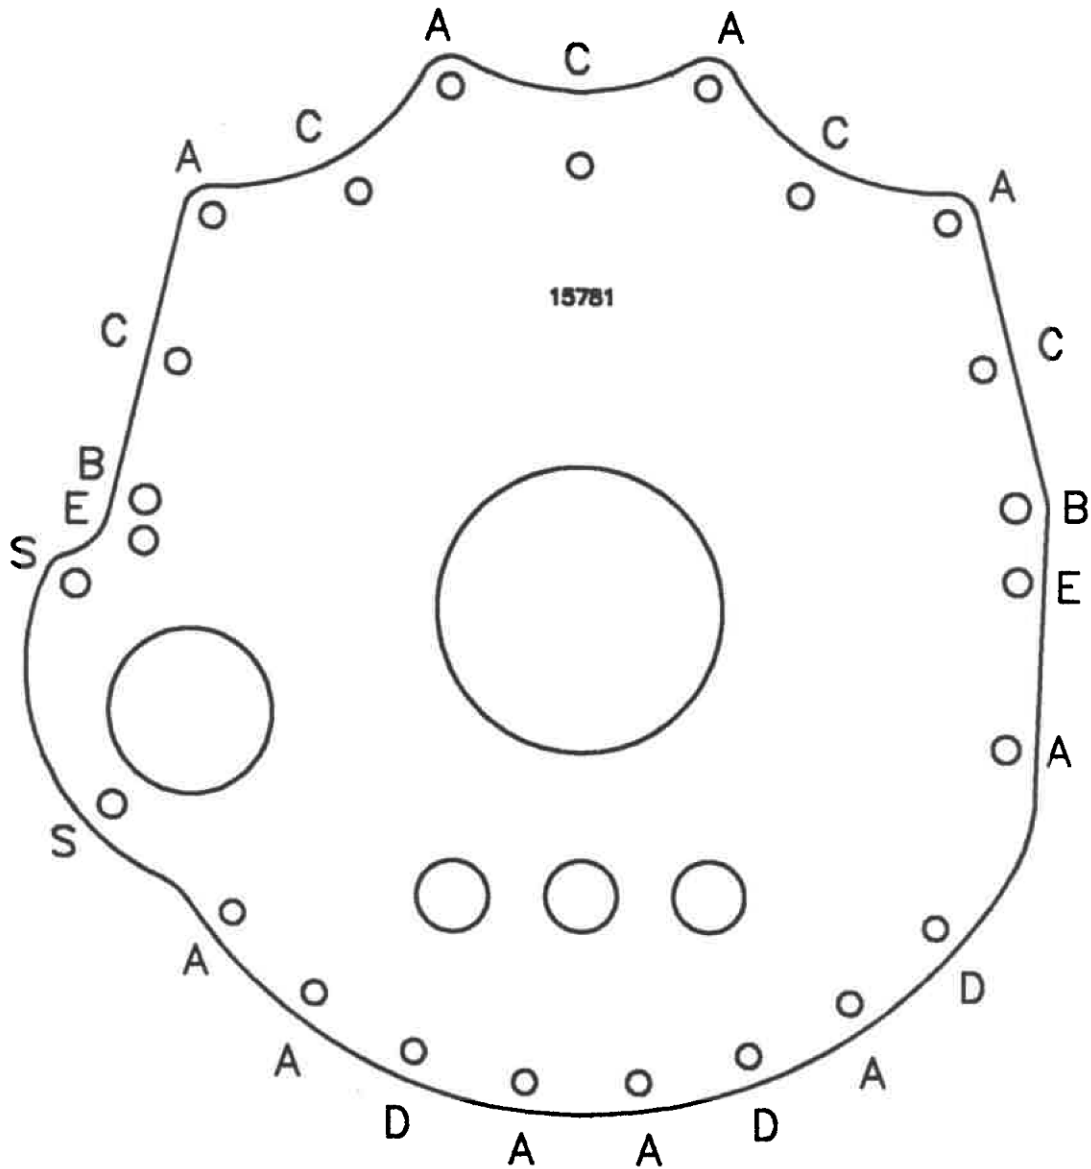

- A = 1/2-13 X 1" GRADE 8 BOLTS, WASHERS & NUTS.
- B = BELLHOUSING LOCATING PINS (NOT INCLUDED)
- C = 3/8-16 X 1" GRADE 8 BOLTS.
- D = 3/8-16 X 1" GRADE 8 BOLTS, WASHERS & NUTS.
- E = 7/16-20 X 2.5" GRADE 8 BOLTS, WASHERS & NUTS.
- S = GRADE 5 STARTER BOLTS.